



GT4

Set Static IP



Enter Terminal Setup Menu

 You need to reboot the clock and press the GEAR button while the clock is booting. Either unplug and plug the clock back in, or go to Admin Options ENTER 1905 twice , and choose the Reboot Clock Option.

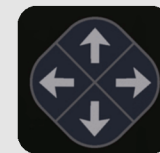

Navigate with Arrow Keys




SELECT




BACK


1. Go To Settings

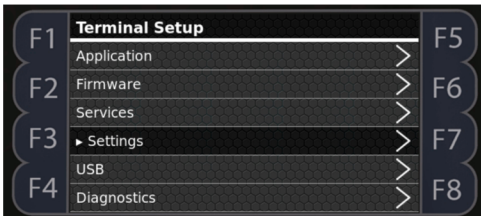


2. Select Network

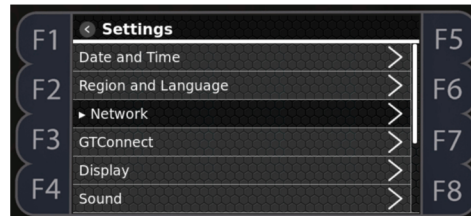

3. Disable DHCP

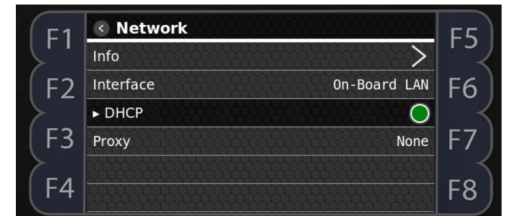

4. With DHCP Disabled you can now set your Static Network Information

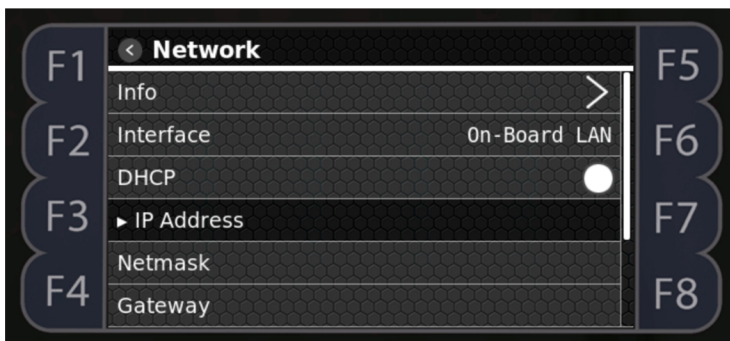

Select the network item, and use the number pad to enter in the desired entry



5. When completed, press the back button until the clock reboots.