

# GT4

## Set WiFi



### Enter Terminal Setup Menu

You need to reboot the clock and press the GEAR button while the clock is booting. Either unplug and plug the clock back in, or go to Admin Options ENTER 1905 twice, and choose the Reboot Clock Option.


Options Keypad Please identify 1905 OK Please enter PIN 1905 OK Reboot Clock




F8 Enter PIN 1905 OK

Navigate with Arrow Keys  
 SELECT BACK


1. Go To Settings

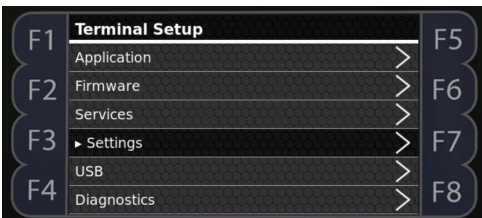


2. Select Network

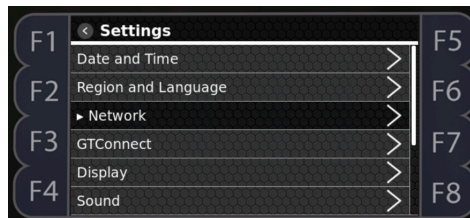


3. Select Interface and Choose Wireless LAN

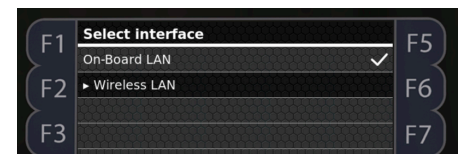


4. Go To SSD to Choose Your WiFi Network

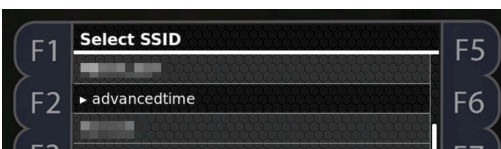


5. Go to Key Management and Choose WPA/WPA2 PSK

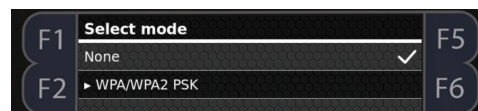


6. Select PSK

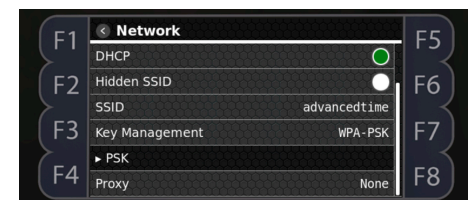

7. Enter your wifi pass key using the Numeric Keypad then press OK when completed

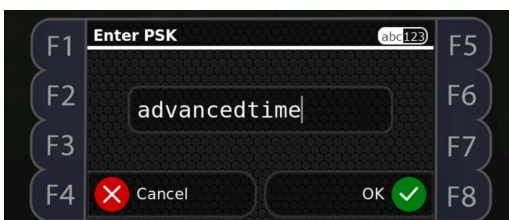

8. When completed, you will press the back button, it will ask if you want to apply your network settings, click YES.

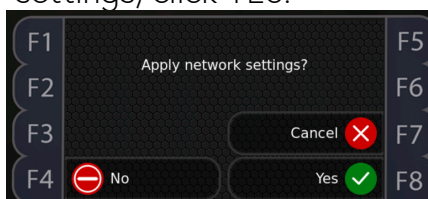

9. Press the back button until the clock reboots.