




Set Bell Schedules

Enter the Bell Schedules menu

Press the Options button, then enter 1905 twice, then press the Bell Schedules button.

Options

Keypad 

Please identify

1905

OK 

Please enter PIN

1905

OK 

Bell Schedules





Navigate with
Arrow Keys


 SELECT

 BACK


1. Select Configure relay times to add new or edit existing times, then Add relay time.

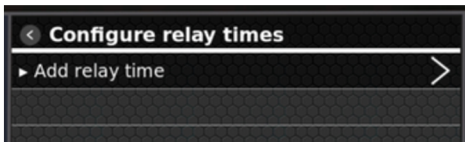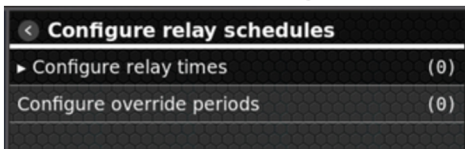

 
2. Enter the relay ON time, this will be when the bell starts

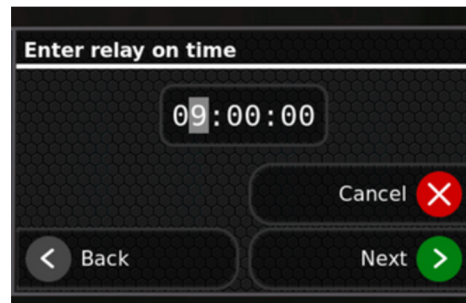

3. Enter the relay OFF time, this will be when the bell stops, usually this is in seconds.

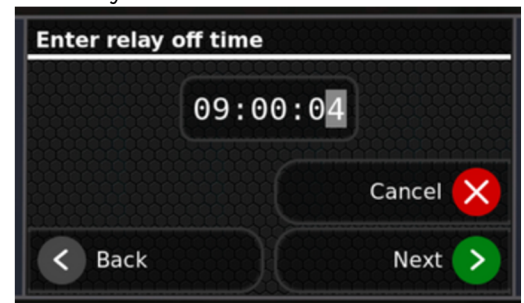

4. Select the days of the week for this relay to be active. F5 is how you OK on this section.

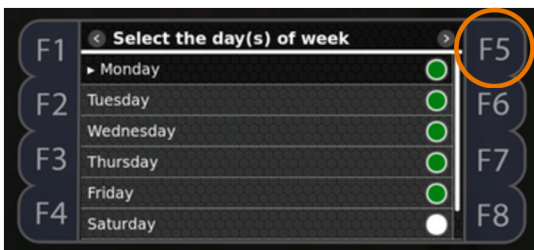

5. Relay 1 should be selected, Press Next.



6. Review the relay schedule, and press next

7. The clock must be re-booted for the new bell schedules to take effect and trigger the relay. Use the Options Button, 1905, 1905, and select "Reboot Clock"

From the Bell Schedules screen you can add more times, or edit existing schedules. You can also use the "Configure Override Periods" to setup date ranges where the relay will not trigger.